

## 50PG20/42PG20 POWER SUPPLY TURN ON COMMANDS FROM MAIN PWB

